

# Pull Type Release Bearing Removal



EXEDY Racing Clutch Technical Information – Ref: 0001

## Bearing Reference: BRG600/BRG601/BRG603



To release the bearing from the cover, apply pressure to the top of the bearing until the bearing moves very slightly downwards and insert a flat head screwdriver in between the bearing and the sprung retaining clip.



Slowly turn the screwdriver half a turn and the bearing will release itself from the cover.



Issued: 26/02/2013 SGC

EXEDY Clutch Europe Ltd  
Unit 2, Rokeby Court, Runcorn, Cheshire, WA7 1RW  
Tel: +44 (0) 1928 571850 Fax +44 (0) 1928 571852 E-mail: [technical@exedy.co.uk](mailto:technical@exedy.co.uk)  
©EXEDY Clutch Europe Ltd | [www.exedy.co.uk](http://www.exedy.co.uk)

